 
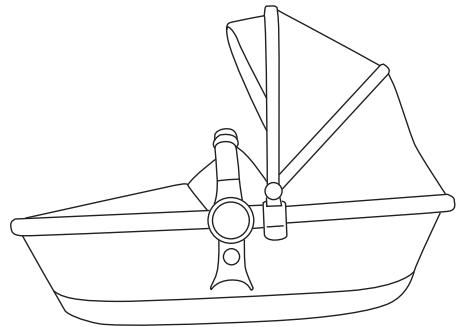 











Silver Cross®

THE BEST START IN LIFE

Surf Pushchair & Carrycot

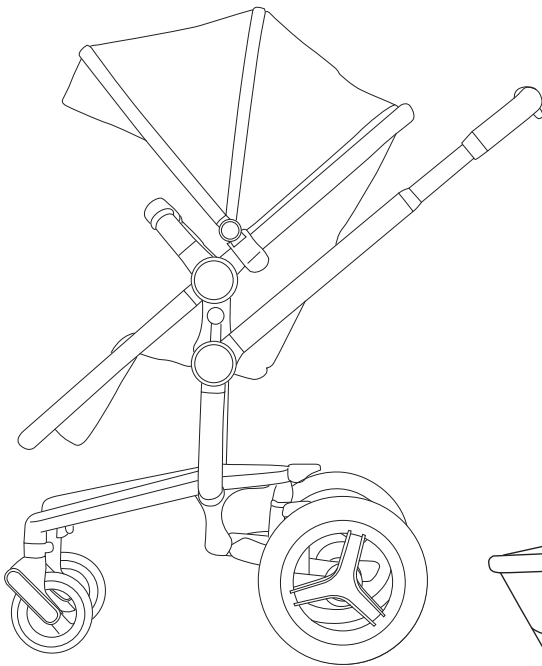

         **IMPORTANT: KEEP THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

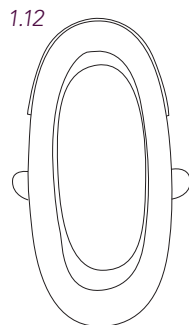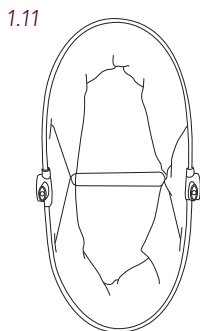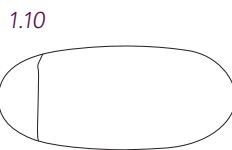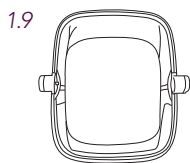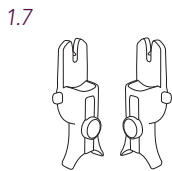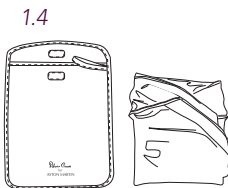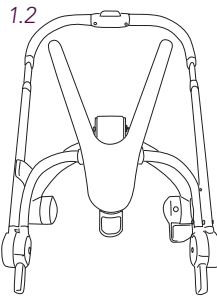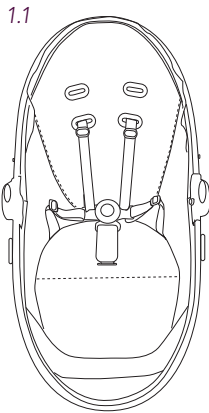

These instructions are important.

Read these instructions before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

Your Surf Pushchair and carrycot is a high quality Silver Cross product. It meets current British and European safety standards and care and regular light maintenance will ensure long service.

This pushchair is suitable from birth up to 9kg with the Carrycot and from 6 months up to 15 kg using the Seat Unit.

If somebody unfamiliar is using your Surf Pushchair always ensure that they read these instructions carefully so that they understand how the product works best.

The Surf Pushchair is designed and tested to be used with the Ventura Plus S Car Seat and Simplicity Infant Carrier and the Surf Essentials pack all sold separately.

 
 
 
Always read all the instructions provided carefully and remember, the safety of your child is your responsibility.

WARNING: It may be dangerous to leave your child unattended.

Contents

First check all your parts have been supplied. Your Surf Pushchair includes:

- 1.1 Surf seat unit with harness
- 1.2 Chassis
- 1.3 Bumper bar
- 1.4 Rain cover
- 1.5 Rear wheels
- 1.6 Front wheels
- 1.7 Simplicity Adaptors
- 1.8 Cup holder
- 1.9 Shopping basket
- 1.10 Carrycot mattress and cover
- 1.11 Carrycot outer
- 1.12 Carrycot liner

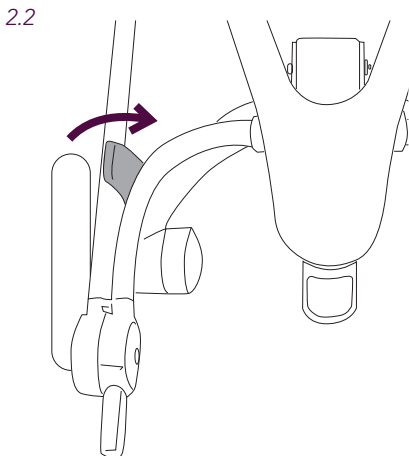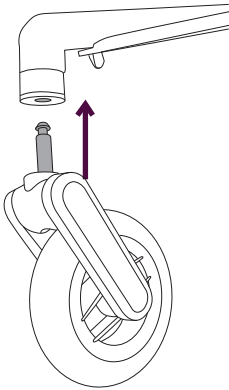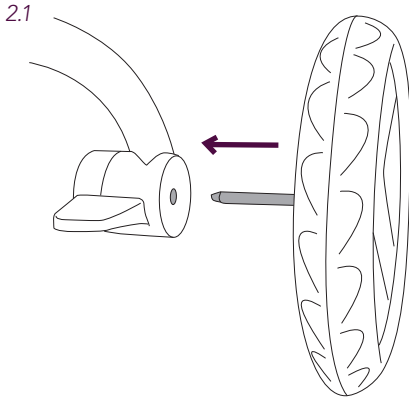

Preparation for use

 
Remove all packaging material from your Surf Pushchair. To use your Surf Pushchair from birth you must use the Silver Cross the Carrycot (included).

WARNING: Check that the carrycot or seat unit is correctly engaged before use.

Surf chassis

- 2.1 Attach the front and back wheels by inserting the axles into the Surf frame until they 'click' into position.
- 2.2 Release the folding lock and lift the handle to waist height.


2.3

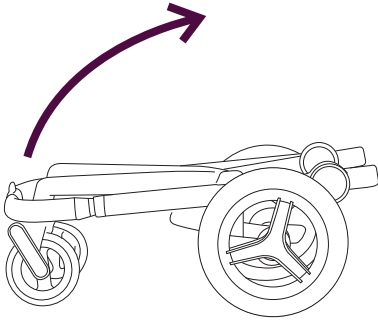


Surf chassis (continued)





- 2.3 Lift the handle upwards and flick forwards, while holding the handle tightly, the frame 'clicks' and locks into position. Always check that the frame is secure.
- 2.4 Apply the brake (see point 23.1) and adjust the handle height by pushing the adjustment button in. Slide the handle up or down and release the adjustment button. The handle will lock and 'click' into position.

 Your Surf chassis is now ready for use.

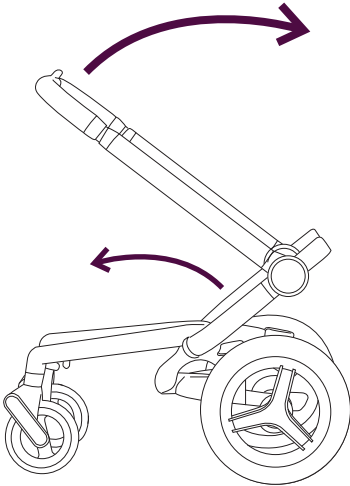

     2.4

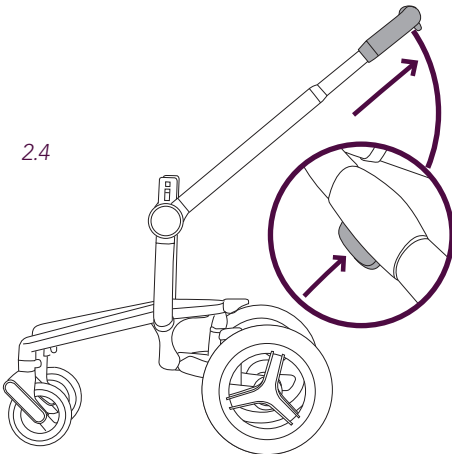

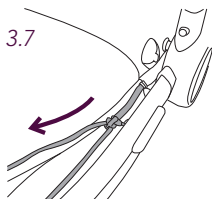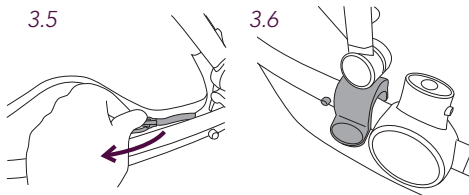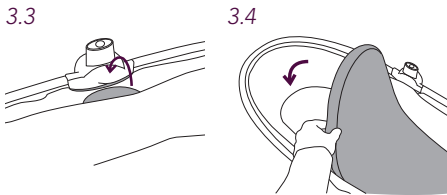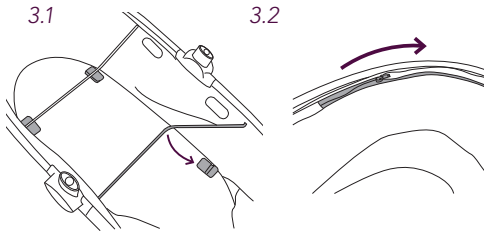


Using your Surf from birth with the carrycot.

Remove all packaging material from your Surf Carrycot.


- 3.1 First erect the carrycot outer. Lay the carrycot outer down with frame upper most. Press the 2 x metal bars into the locators on internal base of carrycot. A small groove in the locator holds the frame in position.
- 3.2 Attach the carrycot liner to the carrycot outer. Fasten each inner zip. There is one at each end of the liner.
- 3.3 Pass the two D-shaped parts of the liner between the liner and the outer and fasten the velcro patches to secure the liner in place.
- 3.4 Place the mattress into the base of the liner.
- 3.5 Zip your Surf hood to the zip on the carrycot outer.
- 3.6 Attach the hood to the frame by pressing down on the hood attachment clips on each side of frame.
- 3.7 Fit the apron by zipping it to the outer.

NOTE: The Apron comes in 2 parts. To use the apron with the carrycot, the lower part of the apron will need to be zipped off first. Please keep the lower part in a safe place.

 3.8

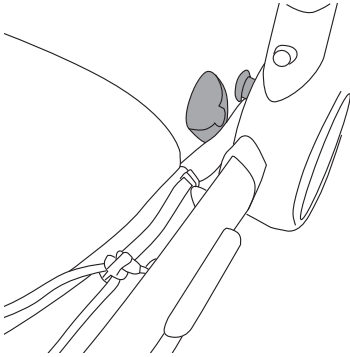

 3.9

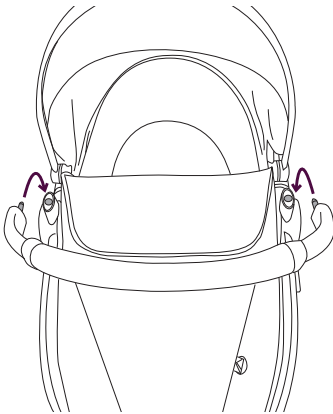

Using your Surf from birth with the carrycot. (continued)

- 3.8 Slide the apron flap clips over the attachment points on the inside of the carrycot frame.
- 3.9 Attach the bumper bar by pressing the ends of the bumper bar into the attachment points of the carrycot frame. Wait to hear them 'click' into place. Lift gently to ensure the bumper bar is locked in place. Fold the apron flap over the bumper bar, the magnets hidden inside the flap will hold it in place.

 
NOTE: The bumper is to be used on the Surf Pushchair and the Surf Carrycot

WARNING: Please ensure the bumper bar is fully locked in place whenever lifting your child in the carrycot. Your child's safety is your responsibility.

WARNING: Ensure all locking devices are engaged before use.

Your Surf Carrycot is ready to use.

4.1

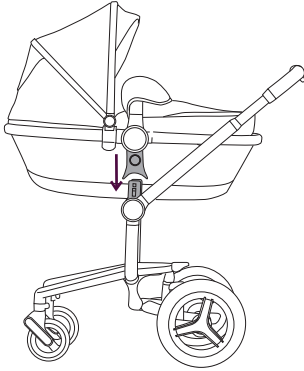


Attaching the carrycot to your chassis

- 4.1 To attach your Surf Carrycot to the Surf chassis hold the carrycot above the chassis. Locate the carrycot chassis connector onto the attachment post of the chassis. Ensure the carrycot 'clicks' into place. The carrycot should be fitted rearward facing. Lift the carrycot gently by the bumper bar to check it has locked into place.

WARNING: Do not add a mattress other than the one provided.

 4.2

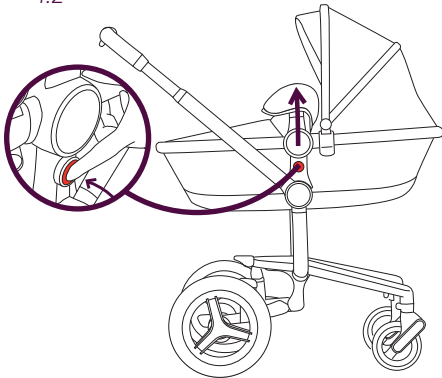

Detaching the carrycot from your chassis

- 4.2 With the Surf Carrycot facing you press the red release button first located on the side of the carrycot until it clicks into place.

 
WARNING: This button is now unlocked. It will re-lock automatically when the carrycot is re-attached to the chassis.

Then while pressing and holding the other black release button on the opposite side of the carrycot, lift the carrycot from the chassis using the bumper bar.


WARNING: Always ensure your bumper bar is attached when your child is in the carrycot.

The carrycot will now lift clear of the chassis.

5.1

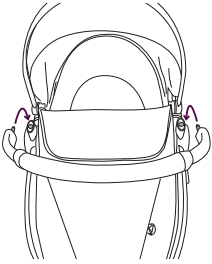

 5.2

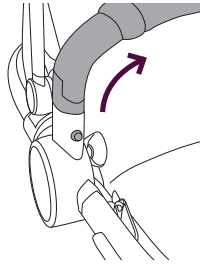

Using your bumper bar on the carrycot

 
Your Surf Carrycot uses the same Surf bumper bar as your seat unit. It can be fully or partly removed.

- 5.1 To attach, simply press both ends of the bumper bar into the connector points on the seat unit. Wait for it to 'click' in place.
- 5.2 To detach, press the bumper bar release button on the carrycot frame with one hand and pull the bumper bar away from the connector point with the other hand. The bumper bar will rotate.


To detach both sides repeat point (5.2) above. With one side of the bumper bar removed the carrycot is easily accessible.

WARNING: The bumper bar must be securely connected at all times when in use. The safety of your child is your responsibility.


6.1

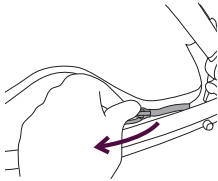

 6.2

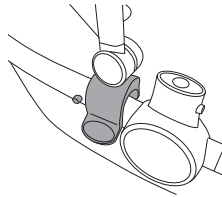

 
6.3

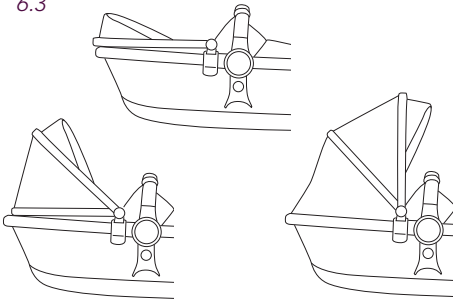


Using your hood on the carrycot

- 6.1 Zip the back of the Surf hood to the top of the Surf Carrycot frame taking care to engage the zip properly.
- 6.2 Your Surf hood fits to the carrycot frame by pressing the hood clips down onto the frame below the round black plastic locator.
- 6.3 Your Surf hood can be used in 4 positions. Fully open, semi-open, semi-open with viewing window, and fully covered.

 7.1

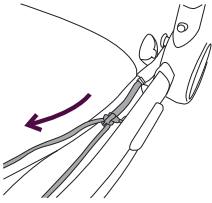

 7.2

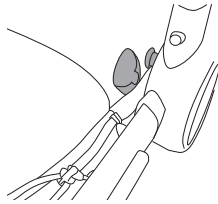


Using your apron on the carrycot

- 7.1 First detach the Surf apron lower section using the zip on the front of the apron and then zip the upper section to the carrycot outer.

NOTE: Please ensure you keep the apron lower section in a safe place, as you will need it when using the Surf as a pushchair.

- 7.2 Slide the apron flap clips over the attachment points on the inside of the carrycot frame and fold the apron flap over the bumper bar using the hidden magnets to secure it in place.

 8.1

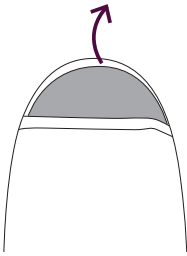


Using your carrycot liner & mattress

- 8.1 Your Surf Carrycot mattress is removable. Simply lift it out of the liner. The mattress cover can be hand washed. Remove the foam mattress insert prior to washing by opening the flap on the back of the mattress cover and removing the foam mattress.

The Surf Carrycot has a removable liner. Simply unzip each end and release the Velcro fastenings to remove it.

To fit the liner and mattress see preparation for use points (3.1-3.4). The liner can be hand washed. (The boards should be removed using the zip on the back prior to washing)

 9.1

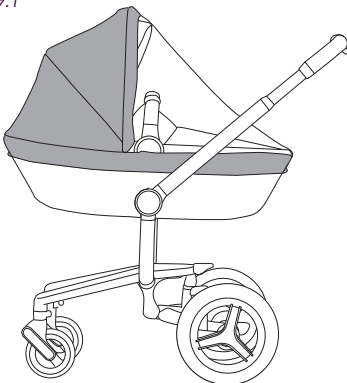



Using your raincover on the carrycot

- 9.1 Your Surf raincover should be used when the Surf hood is attached to the carrycot. First slide over the hood and down towards the foot of the carrycot and over the apron.

NOTE: This raincover can be used on both the Carrycot and the Seat Unit.

A zip gives easy access to your child.

  10.1

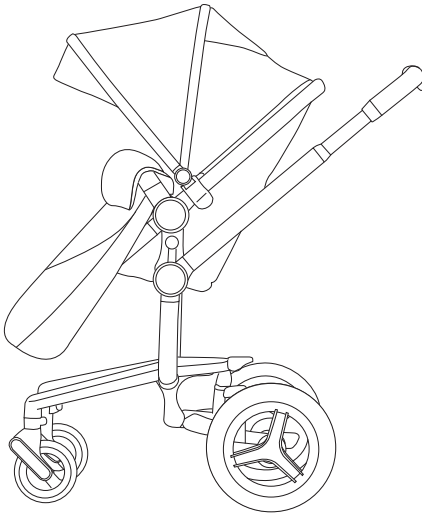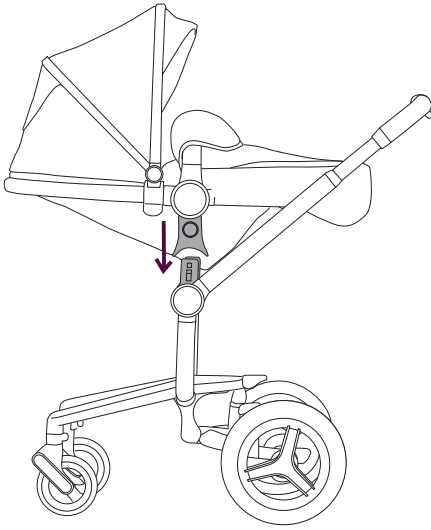


Using your Surf as a pushchair

10.1 Your Surf seat unit can be fitted to the chassis in rearward facing position (infant facing you) or forward facing position (infant facing away from you). Follow point (4.1) to attach the seat unit to the chassis

Adjust the seat unit to the desired position. See point (20.1). Secure the apron see point (17.1). Your Surf Pushchair is ready to use.

 11.1

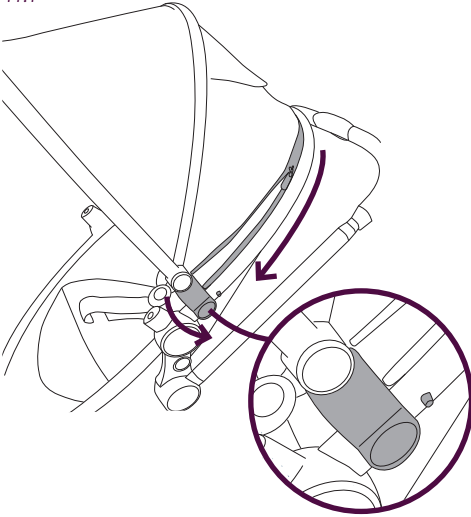


Preparing the seat unit


11.1 First, zip the hood to the back of the seat frame taking care to engage the zip properly. Attach the hood by pressing down on the hood clips on either side of the seat frame below the round black plastic locator.

11.2 Thread the harness through the buttonholes, slide the chest and buckle pads over the harness and secure the harness buckle (see point 15.1).

 11.2

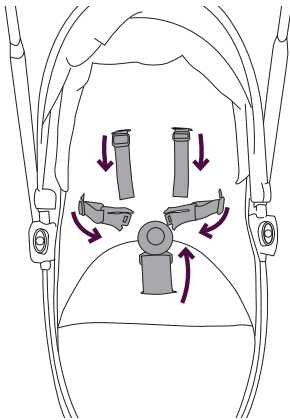

 12.3

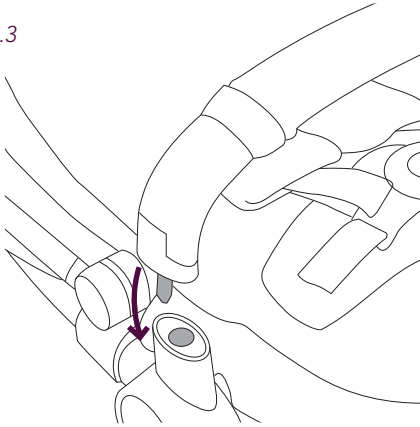


Preparing the seat unit (continued)

- 12.3 Fit the bumper bar to the seat unit by placing the metal ends of the bumper bar into the fixing points on the seat unit. Wait to hear the bumper bar 'click' into place.


WARNING: Always ensure your bumper bar is attached when your child is in the seat unit.

 
NOTE: The apron comes in 2 parts. To use the apron with the seat unit, the lower part of the apron will be needed and should be zipped to the front section.

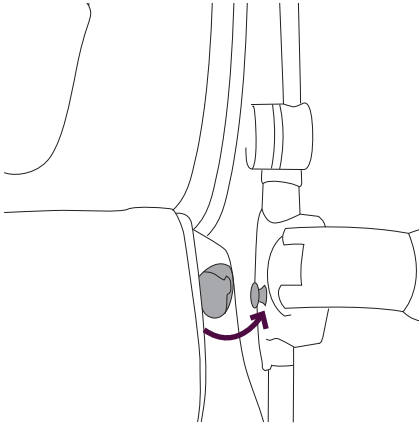

- 12.4 Slide the apron flap clips onto the attachment points on the inside of the seat frame. Fold the apron flap over the bumper bar to enclose and secure your child. To secure, release and adjust the harness see points (15.1-15.5)

  12.4

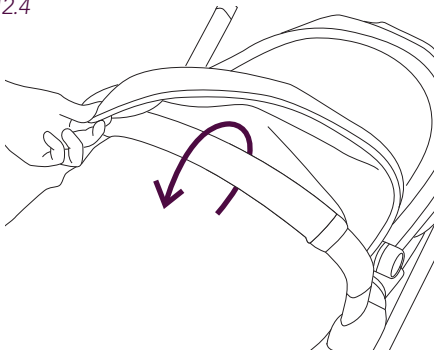

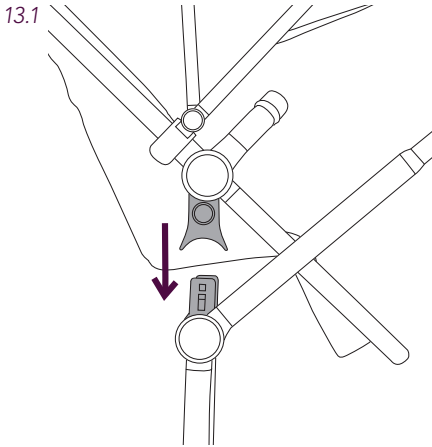


Attaching the seat unit to your chassis

WARNING: Ensure all locking devices are engaged before use.

- 13.1 To attach your Surf seat unit to the Surf chassis hold the seat unit above the chassis. Locate the seat unit chassis connector onto the seat attachment post of the chassis. Ensure the seat unit 'clicks' into place. The seat unit can be fitted forward or rearward facing. Lift the seat unit gently by the bumper bar to check the seat has locked into place.

 To adjust the seat position (see point 20.1).

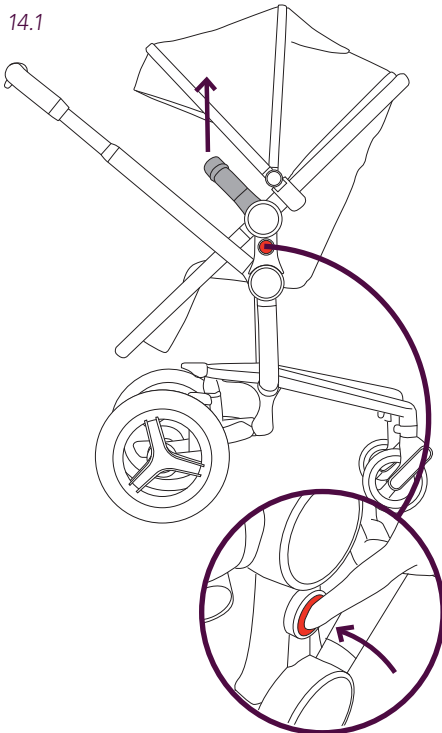

Detaching the seat unit from your chassis

- 14.1 With the seat unit facing you press the red release button first located on the side of the seat unit until it clicks into place.

WARNING: This button is now unlocked. It will re-lock automatically when the seat is re-attached to the chassis.

 
Then while pressing and holding the other black release button on the opposite side of the seat unit, lift the seat unit from the chassis using the bumper bar.

WARNING: Always ensure your bumper bar is attached when your child is in the seat unit.


The seat unit will now lift clear of the chassis.

NOTE: Remove the child from the seat unit before detaching from your chassis.


15.1

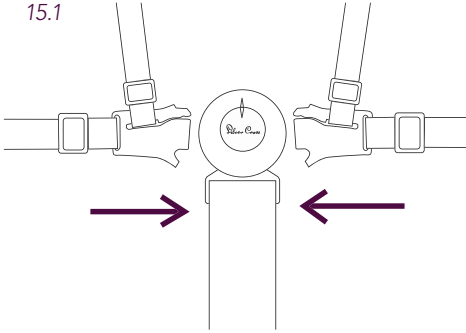

 15.2

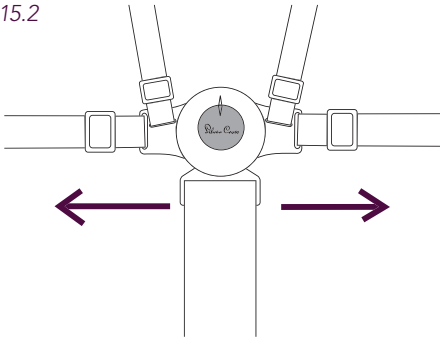

 15.3

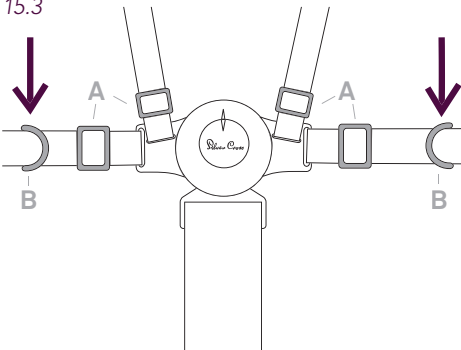

Using the harness

WARNING: Always use the crotch strap in combination with the waist and shoulder straps

15.1 To fasten the harness insert both buckle clips into each side of the buckle. Listen for the 'click'.

 
WARNING: Always use the harness provided.

15.2 To release the harness press the button at the centre of the buckle and pull apart. The shoulder straps can be unhooked from the buckle if required.

15.3 Your harness is fully adjustable by moving the slides (A), to make fitting easy. 'D' rings are provided for fitting a separate harness if required (B). Any additional harness must comply with BS 6684. Your child should always be harnessed in and should never be left unattended, even for short periods of time.

Your Surf harness can be adjusted for the size of your child.

15.4

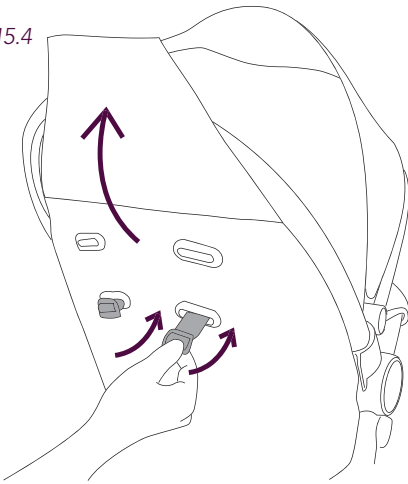


Using the harness (continued)


15.4 The shoulder straps have 2 height positions. To adjust, first lift the flap on the back of the seat unit. Thread the harness from the back of the seat unit through to the front of the seat unit and allow the restraint clip to lay flat behind the seat securing the shoulder strap in place.

15.5 The waist straps can be reduced to fit a smaller child by threading them through the loops on the seat.

 15.5

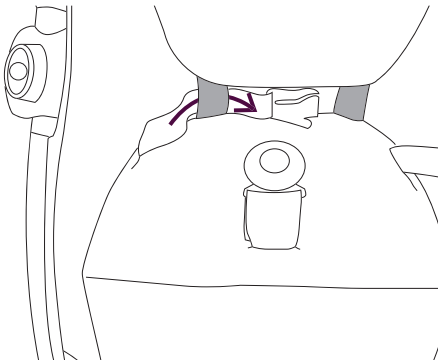

 16.1

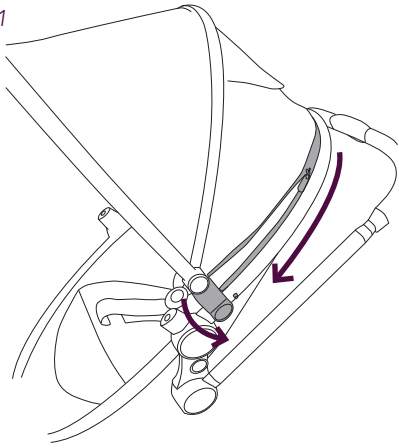


Using your hood on the Seat


16.1 Zip the hood to the back of the seat frame taking care to engage the zip properly. Attach the hood by pressing down on the hood clips on either side of the seat frame below the round black plastic locator.

16.2 Your Surf hood can be used in 4 positions. Fully open, semi-open, semi-open with viewing window, and fully covered.

 16.2

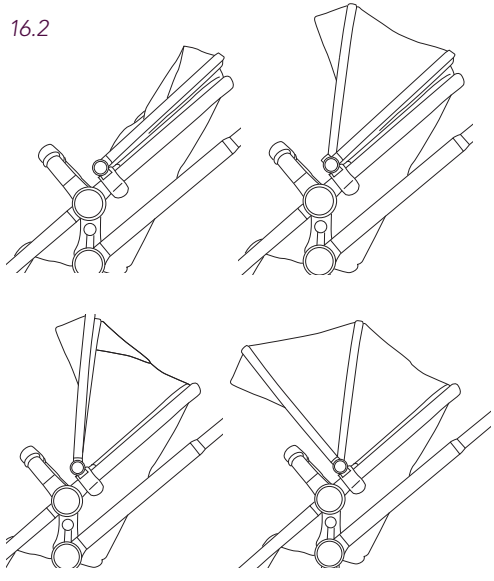


 17.1

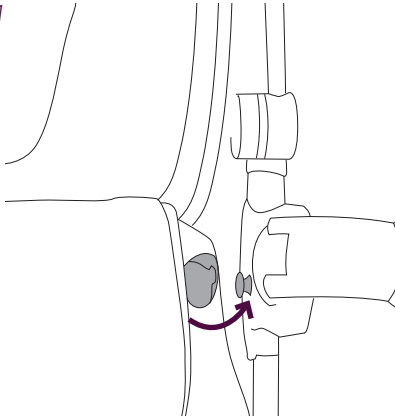


Using your apron on the Seat

 - 17.1 Slide the apron flap clips on your apron to the attachment points on the inside of the seat frame and fold the apron flap over the bumper bar to enclose and secure your child.

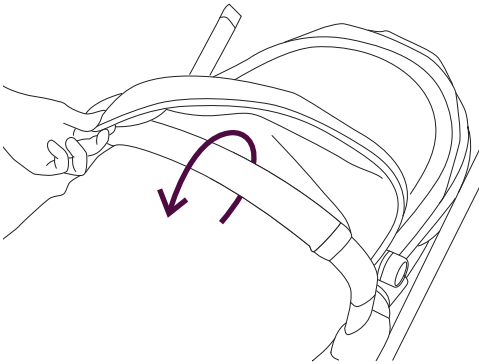

 18.1

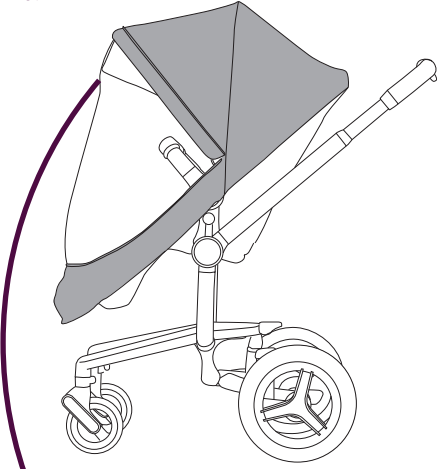


Using your raincover on the Seat


18.1 Your Surf raincover should be used when the Surf hood is attached to the seat unit. First slide over the hood and down towards the toe of the seat unit. Velcro fastening secures the raincover under the foot of the seat unit.

18.2 A zip gives easy access to your child.

 18.2

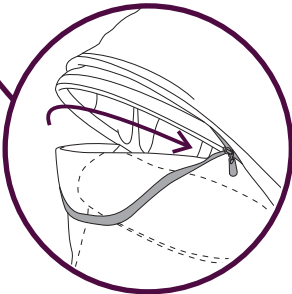

 19.1

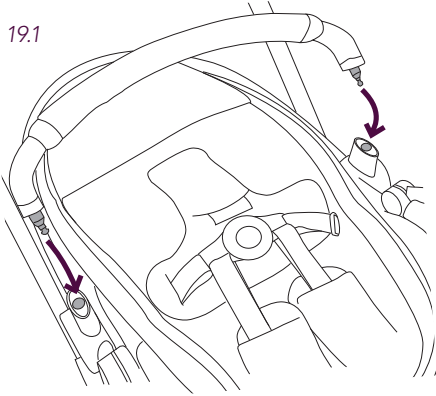


Using your bumper bar on the Seat Unit

Your Surf seat unit has a bumper bar that can be fully or partly removed.

WARNING: Always ensure your bumper bar is attached when your child is in the seat unit.


- 19.1 Fit the bumper bar to the seat unit by placing the metal ends of the bumper bar into the fixing points on the seat unit. Wait to hear the bumper bar 'click' into place.
- 19.2 To detach, press the bumper bar release button on the seat unit with one hand and pull the bumper bar away from the fixing point with the other hand. The bumper bar will rotate allowing easy access to your child, if the bumper needs to be fully removed then repeat on the opposite side.

 19.2

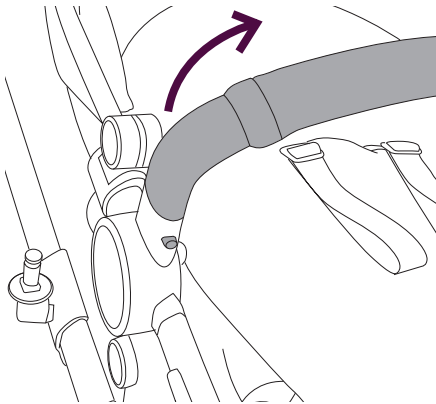

WARNING: Always remove your child from the seat before attempting to lift and remove the seat unit.

 20.1

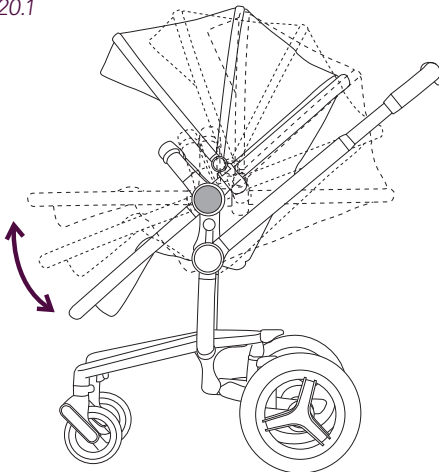


Adjusting the seat position


Your Surf has 3 forward facing and 3 rearward facing seat positions

- 20.1 To adjust the seat position in either forward or rearward facing mode, grip the outside of the seat unit with both hands. Place your fingers against the large, circular seat adjustment buttons. Press firmly inwards moving the seat unit forwards or backwards to upright, semi-recline or full recline. Release the button and wait to hear the 'click' for each position to lock into place.

 
21.1

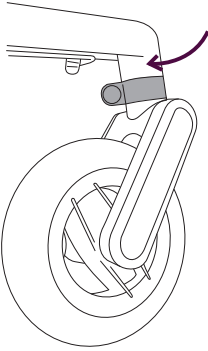

 
21.2

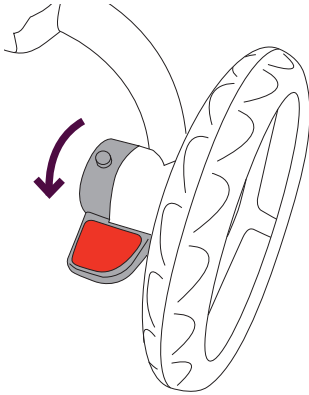

 21.3

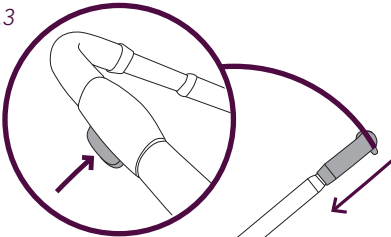

 21.4

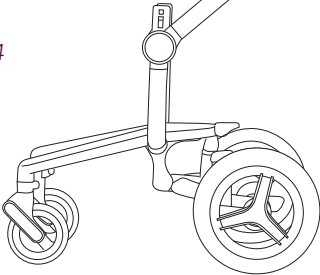


Folding your Surf chassis

NOTE: To ensure your Surf chassis folds correctly remove all items from the shopping basket before attempting to fold.

NOTE: If using as a travel system (with a car seat), pushchair (with seat unit) or pram (with Surf Carrycot) please ensure each part has been removed before folding.

- 21.1 Ensure the swivel wheels are locked.
(See point 24.1)
- 21.2 Engage the red coloured brake pedal.
(See point 23.1)
- 21.3 Press and hold the handle height adjustment /folding button and slide the handle down to its lowest point.
- 21.4 Applying pressure to the centre of the handle, push down to release the locking mechanism.

 22.1

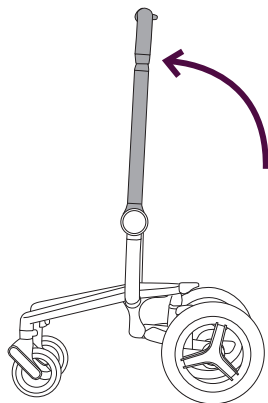


Folding your Surf chassis


22.1 Rotate the handle forwards to its vertical position, listen for the click.

22.2 Still holding the handle press down gently on the central red foot pedal. Rotate the handle forwards as the chassis begins to fold.

 
22.3 Ensure the folding lock is applied by pressing down on the folded frame.

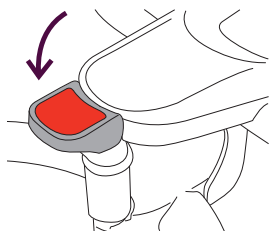

 
22.2

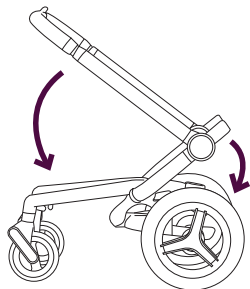

 22.3

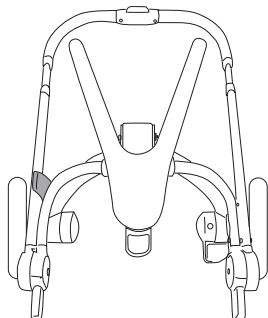

 23.1

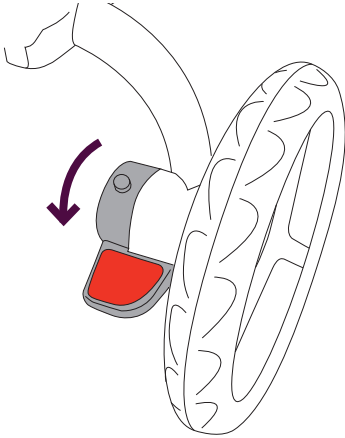

Using the brake

 
WARNING: Always apply the parking brake when you are standing still.

23.1 To engage the brake, press down on the red brake pedal. Listen for the 'click'.

NOTE: Always check that your brake is fully engaged by gently rocking the pushchair.

23.2 To disengage the brake, gently press down on the green brake release button. Rock the pushchair backwards before moving forward.

23.2

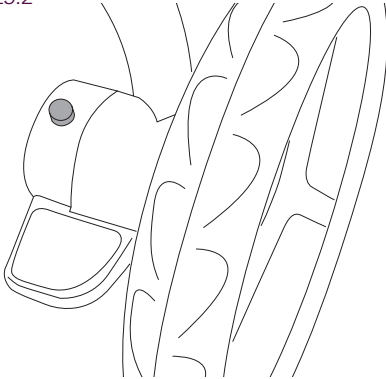


Operating your swivel wheels


NOTE: Your Surf chassis has lockable front, swivel wheels. We advise locking the front wheels if pushing the pushchair straight ahead for a long period.

24.1 Rotate the swivel release lever sideways to lock the wheels into the fixed position.

 24.1

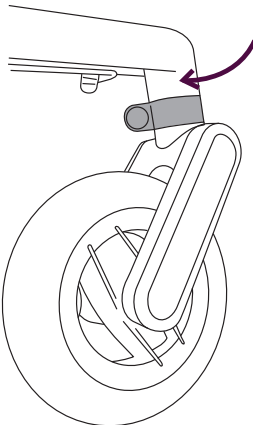

 25.1

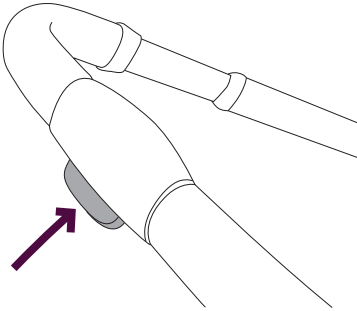


Operating your height adjustable handle


Your Surf has a 4 position handle height.

- 25.1 Press and hold the handle height adjustment /folding button and slide the handle down to its lowest point.
- 25.2 Slide the handle up or down to required height and release the adjustment button. The handle will lock and 'click' into place.

 25.2

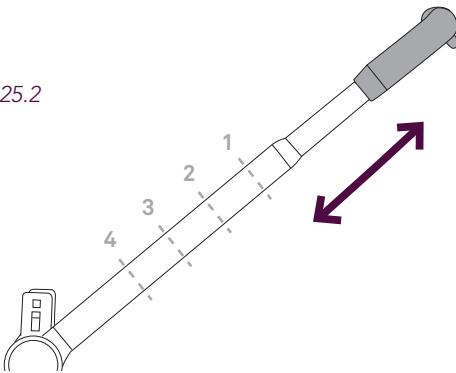

 26.1

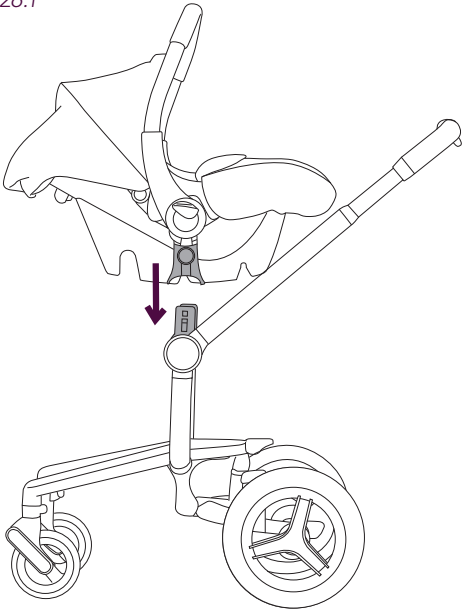

Using your Surf Chassis with the Ventura Plus S Car Seat

 
26.1 To attach your Ventura Plus S car seat to the Surf chassis, hold the car seat centrally over the attachment post of the chassis. The locating points on the car seat will slide over the attachment posts on the chassis and 'click' into place. Gently lift the car seat to ensure it is fully locked onto the chassis.

26.2 With the Ventura Plus S car seat facing you, detach by pressing the red release button located on the connection point on the Ventura Plus S car seat until it clicks into place.


WARNING: This button is now unlocked. It will re-lock automatically when the seat is re-attached to the chassis.

Then while pressing and holding the other black release button, lift the car seat from the chassis using the handle. The car seat will now lift clear of the chassis.

26.2

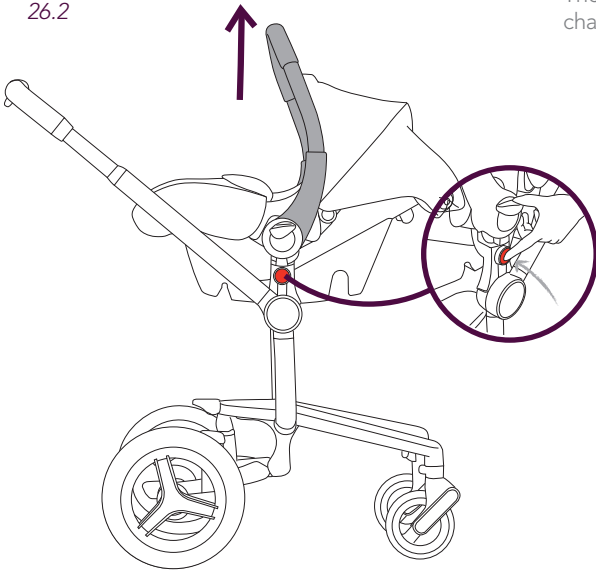

 27.1

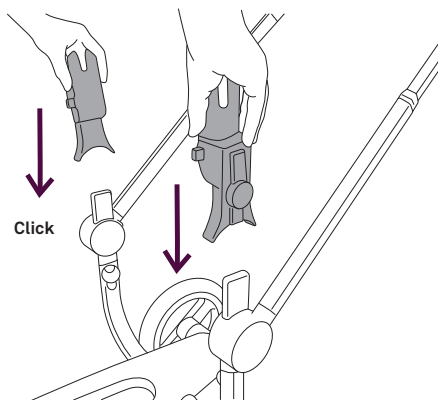


Using your Surf chassis with the Simplicity Infant Carrier

27.1 To attach your Surf Simplicity Adaptors, locate the adaptors onto the chassis attachment posts on both sides. Ensure the adaptors 'click' into place.

WARNING: Standing behind the Surf handle, ensure the adaptor with the red button is located on the right of the chassis. Attaching to the left hand side may damage your adaptor.

 
27.2

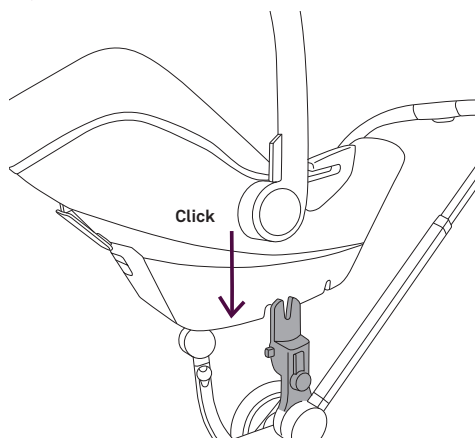

27.2 Place the Simplicity Infant Carrier onto the adaptors. Ensure the Simplicity 'clicks' into place. Lift the Simplicity gently by the carry handle to check the Simplicity has locked into place.

WARNING: Check that the Simplicity attachment devices are correctly engaged before use.

 
28.1

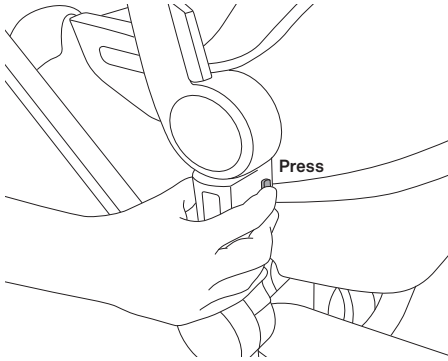


Detaching the Simplicity from the chassis

- 28.1 With the Simplicity Infant Carrier facing you, first press the silver button on the front of the Right Hand Side adaptor until it clicks into place.
- 28.2 Then while pressing and holding the other silver button on the front of the Left Hand Side adaptor, lift the Simplicity from the chassis using the carry handle.

 28.2

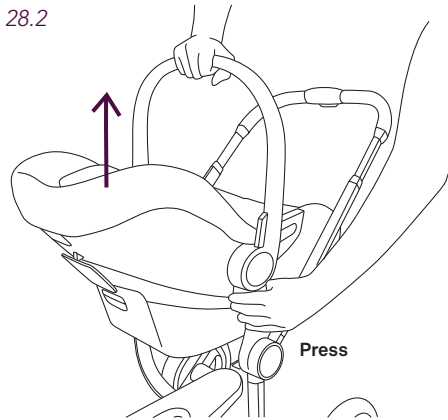

 29.1

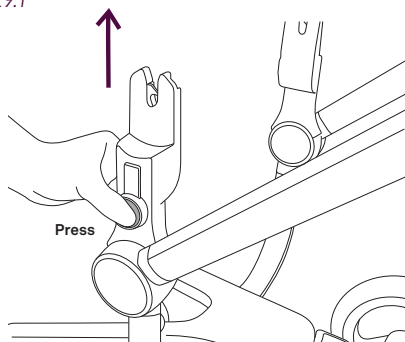

Removing the Simplicity Adaptors from the chassis

29.1 For both adaptors, press the circular button on the side of the adaptor and pull adaptor upwards to release from chassis.

WARNING: Do not remove the Simplicity Infant Carrier with the adaptors still attached to the Simplicity.

WARNING: Your Simplicity Infant Carrier should always be rearward facing.

NOTE: Always remove the adaptors before folding the chassis or attaching your Surf seat unit or Surf carrycot. Failure to do so may result in your adaptors or chassis being damaged.

Safety Notes

Your Surf Pushchair is a high quality Silver Cross product. It complies with BS EN: 1888:2012 and with correct use and maintenance will give good service. If, however you should have any problems with your pushchair, please contact your Silver Cross retailer who will take appropriate action. The Surf carrycot complies with BS EN: 1466:2004.

WARNING:

Never leave your child unattended.

Ensure that all the locking devices are engaged before use

To avoid injury ensure that your child is kept away when unfolding and folding this product.

Do not let your child play with this product

Use a harness as soon as your child can sit unaided.

Carrycot mode:

This product is not suitable for a child who cannot sit up itself, rollover and cannot push itself up on its hands and knees.

Maximum weight of the Child: 9kg

Do not let other children play unattended near the carrycot.

Seat unit mode:

This seat unit is not suitable for children under 6 months.

**Maximum weight of the Child:
Up to 15kg**

Always use the restraint system

Check the pram body or seat unit or car seat attachment devices are correctly engaged before use.

This product is not suitable for running or skating.

Do not carry more than one child in this pushchair / carrycot.

Ensure the parking devices are engaged when placing and removing your child.

Do not let other children play unattended near the carrycot. The carrycot is only suitable for a child who cannot sit up unaided.

Never use the carrycot on a stand

Do not use if any part is broken, torn or missing.

Be aware of the risk of open fire and other source of strong heat, such as electric bar fires, gas fires, etc in the near vicinity of the carrycot.

The handles and the bottom of the carrycot should be checked regularly for signs of damage and wear.

Do not add a mattress to the carrycot other than the one provided.

Car seats do not replace a cot or bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.

Any load attached to the handle and/or backrest and/or side of the vehicle will affect stability of the vehicle.

Do not stand a second child on rear lock and use as a buggy board.

Do not attach a third party buggy board.

Accessories which are not approved by Silver Cross shall not be used.

Only replacements parts supplied/recommended by Silver Cross shall be used.

The child should be clear of moving parts whilst making adjustments.

Do not allow your child to climb in or out of the pushchair of their own accord, as this could result in injury to your child or damage to your pushchair.

Never leave your child in the pushchair with the raincover fully fitted other than in normal outside use.

The safety of your child is your responsibility.

Only place the carrycot on a firm, horizontal and dry surface.

The child should always wear a safety harness complying with BS6684. 'D' rings are provided for the attachment of an additional harness.

These are located on the existing harness close to where it is attached to the seat frame. Do not hang shopping bags or other objects from the handle. This may cause the pushchair to tip up. Extra shopping or luggage should only be carried in the basket and should not exceed 1kg in weight, evenly distributed. Always hold the seat when making adjustments. Ensure that the brake is on.

Never try to fold your Surf when the child is seated as this may trap the child. If you have difficulty in folding or unfolding the pushchair, do not force. This will cause damage. Read the "To fold or unfold" instructions carefully in the Surf Instructions. It may be unsafe to fit accessories or spare parts other than those supplied or recommended by Silver Cross. If anyone other than the owner is going to use the Pushchair (e.g. grandparent, child minder), please show them how to use it correctly.

The Surf seat unit and Surf carrycot are only compatible with: Surf Chassis

Basket Capacity: 5kg

Changing Bag: Maximum load = 1kg (sold separately)

Cup holder: Maximum load = 0.5kg

Surf Board: Maximum load = 20kg (sold separately)

Care and Maintenance

Chassis

Always check your pushchair for signs of wear. Regularly lubricate all moving parts. Check for freedom of movement of all locking devices. Polish metal work with a clean, dry cloth.

Fabric items and seat unit

For fabric wash care instructions please refer to the care guide included with your pram. Keep away from direct heat and strong sunlight. A certain degree of fading may occur over time through everyday use. Never machine wash, tumble dry, iron or bleach.

Never leave accessories such as the Sunshade or raincover where heat and light may discolour the fabrics or distort the plastics, e.g. on the car parcel shelf in hot weather.

Guarantee

All Silver Cross products are guaranteed for a period of 12 months against faulty workmanship, when the product is used correctly according to the instruction manual.

Please read these instructions carefully before using your new Surf Pushchair and keep for future reference.

Consignes de sécurité

Ce produit est un article Silver Cross de la plus grande qualité. Il est conforme aux normes BS EN1888:2012 et BS EN: 1466:2004 et saura répondre à vos besoins s'il est utilisé et entretenu correctement. Si toutefois vous rencontrez le moindre problème avec votre poussette, veuillez contacter votre revendeur Silver Cross pour qu'il prenne les mesures adéquates.

Ce produit est appelé: Surf

Avertissement:

Ne laissez jamais votre enfant sans surveillance.

Assurez-vous que tous les dispositifs de verrouillage sont enclenchés avant utilisation.

Pour éviter les blessures, maintenez votre enfant à l'écart lorsque vous pliez et dépliez ce produit.

Ne laissez pas votre enfant jouer avec ce produit.

Utilisez un harnais dès que votre enfant peut s'asseoir tout seul.

Mode nacelle:

Ce produit est adapté à un bébé qui ne tient pas assis, ne se retourne pas et ne peut se redresser à l'aide de ses mains et ses genoux.

Le poids maximum de l'enfant: 9kg

Ne laissez pas d'autres enfants jouer sans surveillance à proximité de cette nacelle.

Mode Poussette:

Ce produit ne peut pas être utilisé avec des enfants de moins de 6 mois.

Le poids maximum de l'enfant: 15kg

Utilisez toujours le système de retenue.

Vérifiez que les dispositifs de fixation de la nacelle ou du siège auto sont correctement enclenchés avant utilisation.

Ce produit n'est pas conçu pour la course ou le patinage.

Ne transportez pas plus d'un enfant sur cette poussette.

Le frein doit être actionné lorsque vous positionnez ou retirez votre enfant de la poussette.

Ne laissez pas d'autres enfants jouer sans surveillance à proximité de cette nacelle.

Ce produit est adapté à un bébé qui ne tient pas assis, ne se retourne pas et ne peut se redresser à l'aide de ses mains et ses genoux.

N'utilisez jamais la nacelle sur une base autonome.

N'utilisez pas ce produit si l'une des pièces est endommagée, déchirée ou manquante.

Soyez conscient du risque que présentent les feux à ciel ouvert

ou toute autre source de chaleur intense située à proximité de cette nacelle, comme les armoires électriques, brûleurs à gaz, etc.

Les poignées et le bas de la poussette devraient être régulièrement contrôlés afin de détecter d'éventuels dommages ou traces d'usure.

N'ajoutez pas d'autre matelas que celui fourni.

Si le siège auto est utilisé : ce siège auto ne remplace pas un lit pour bébé. Si votre enfant veut dormir, installez-le dans une nacelle ou un lit adapté.

Toute charge posée sur la poignée, le dossier ou les bords de la poussette risque de compromettre sa stabilité.

Ne laissez pas un autre enfant se tenir debout sur le système de verrouillage arrière pour vous en servir de marchepied.

N'utilisez pas de marchepied d'autre provenance avec cette poussette.

Aucun accessoire non approuvé par Silver Cross ne doit être utilisé.

N'utilisez que des pièces détachées fournies/recommandées par Silver Cross.

Tenez les parties mobiles hors de la portée de votre enfant lorsque vous effectuez des réglages.

Ne laissez pas votre enfant grimper tout seul dans/hors de la poussette car il pourrait se blesser ou endommager la poussette.

Ne laissez jamais votre enfant avec l'habillage pluie refermé sur la poussette ailleurs qu'à l'extérieur.

Vous êtes responsable de la sécurité de votre enfant.

Le seul endroit où la nacelle sur une surface ferme et horizontale et sèche.

L'enfant doit toujours porter un harnais de sécurité conforme à la norme BS6684. Les anneaux en « D » sont fournis pour attacher un harnais supplémentaire. Ces anneaux sont situés sur le harnais existant, à côté du point de fixation du harnais au châssis du siège.

Tenez toujours le siège lorsque vous effectuez des réglages. Assurez-vous que le frein est actionné. Si vous rencontrez des difficultés pour plier ou déplier la poussette, ne forcez pas car vous risqueriez de l'endommager. Lisez attentivement les instructions « Pliage ou dépliage ». Ne montez pas des accessoires ou pièces de rechange autres que ceux fournis ou recommandés par Silver Cross, car cela peut être dangereux. Si une personne autre que le propriétaire utilise la poussette (par exemple : grands-parents ou nourrice), montrez-lui comment l'utiliser correctement.

Uniquement compatible avec: Surf châssis

Capacité du panier: 5kg

Sac à langer: Charge maximale = 1kg (vendu séparément)

Porte-gobelet: Charge maximale = 0.5kg

Surf Board: Charge maximale = 20kg (vendu séparément)

Nettoyage et entretien

Châssis - vérifiez toujours que la poussette ne présente pas de traces d'usure. Lubrifiez régulièrement toutes les pièces mobiles. Vérifiez la liberté de mouvement de tous les dispositifs de verrouillage. Frottez les parties métalliques avec un chiffon propre et sec.

Parties en tissu et siège -pour nettoyer, utilisez une éponge et de l'eau chaude savonneuse. Rincez bien à l'eau claire pour ne pas laisser de taches. Laissez sécher à l'écart d'une source de chaleur directe et de la lumière intense du soleil. Les couleurs peuvent s'altérer avec le temps. Ne lavez et ne séchez jamais en machine, ne repassez jamais et n'utilisez jamais d'eau de javel.

Garantie

Tous les produits Silver Cross sont garantis pour une période de 12 mois contre tout défaut de fabrication, si le produit est utilisé conformément au manuel d'instructions.

Veuillez lire ces instructions attentivement avant d'utiliser votre nouveau produit Silver Cross et veuillez les conserver pour référence ultérieure.

Norme di sicurezza

Questo articolo è un prodotto Silver Cross di alta qualità. È conforme alle norme BS EN 1888:2012 e BS EN 1466:2004 e con un uso e una manutenzione corretti garantisce un ottimo funzionamento. Se, tuttavia, si riscontrano problemi nell'utilizzo del prodotto, contattare il rivenditore Silver Cross che si adopererà per la risoluzione del problema.

Questo prodotto si chiama: Surf

AVVERTENZE:

Mai lasciare il bambino incustodito.

Accertarsi che tutti i dispositivi di bloccaggio siano inseriti prima dell'uso.

Per evitare infortuni assicurarsi che il bambino sia a debita distanza durante le operazioni di apertura e chiusura del passeggino.

Non lasciare che il bambino giochi con il prodotto.

Utilizzare l'imbracatura non appena il bambino sarà in grado di stare seduto da solo.

Modalità navicella:

Questo prodotto è adatto ai bambini che non sono in grado di stare seduti da soli, di girarsi e di sollevarsi sulle mani e sulle ginocchia.

Peso massimo del bambino: 9 kg

Non lasciare che altri bambini giochino incustoditi nelle vicinanze della culla da viaggio.

Modalità Passeggino:

Il prodotto non è idoneo all'utilizzo per bambini al di sotto dei 6 mesi.

Peso massimo del bambino: 15kg

Utilizzare sempre il sistema di ritenuta.

Controllare che i dispositivi di attacco della seduta del passeggino, del seggiolino, o del sedile dell'auto siano correttamente inseriti prima dell'uso.

Il prodotto non è adatto per correre o pattinare.

Non trasportare più di un bambino in questo passeggino.

Il dispositivo di stazionamento deve essere inserito quando si fa salire o scendere il bambino.

Non lasciare che altri bambini giochino incustoditi nelle vicinanze della culla da viaggio.

Questo prodotto è adatto solo per un bambino che non riesce a stare seduto da solo.

Non usare mai la culla da viaggio su un piedistallo.

Non utilizzare in caso di parti rotte, strappate o mancanti.

Stare attenti ai rischi che possono derivare da fiamme libere e da altre fonti di calore eccessivo come quelle di stufe elettriche, stufe a gas ecc. che possono trovarsi in prossimità della culla da viaggio.

Controllare regolarmente i manici e la parte inferiore per verificare che non siano danneggiati e non presentino segni di usura.

Non aggiungere un altro materassino se non quello già in dotazione.

Quando si utilizza il seggiolino: questo seggiolino per auto non sostituisce la culla o il lettino. Qualora il bambino avesse bisogno di dormire, sarà necessario adagiarlo in una seduta o in una culla adeguata.

Eventuali carichi presenti sul manico e/o sul retro dello schienale, e/o sulla parte laterale del passeggino comprometteranno la stabilità del passeggino stesso.

Non consentire ad un secondo bambino di rimanere in piedi sul blocco posteriore e di utilizzarlo come pedana.

Non montare pedane di altre marche.

Non utilizzare accessori non approvati da Silver Cross.

Utilizzare solo parti di ricambio fornite/raccomandate da Silver Cross.

Tenere il bambino lontano dalle parti mobili durante le operazioni di regolazione.

Per evitare danni al passeggino o infortuni non permettere al bambino di salire e scendere da solo dal passeggino.

Non lasciare mai il bambino nel passeggino con il parapigioggia completamente montato, se non durante il normale impiego all'aperto.

La sicurezza del bambino è responsabilità dell'adulto.

Utilizzare solo su superfici compatte, orizzontali, piane e asciutte.

Il bambino deve sempre indossare l'imbracatura in conformità alla norma BS6684. Gli anelli a 'D' sono forniti per il fissaggio di una ulteriore imbracatura. Essi sono posizionati sull'imbracatura già presente accanto al punto di fissaggio sulla base della seduta.

Tenere sempre la seduta durante le operazioni di regolazione. Accertarsi che il dispositivo di stazionamento sia inserito. In caso di problemi nel chiudere o aprire il passeggino, non forzare, onde evitare danni. Leggere attentamente le indicazioni sull'apertura e la chiusura del passeggino. Potrebbe essere pericoloso montare parti di ricambio o accessori diversi da quelli forniti o raccomandati da Silver Cross. Se il prodotto viene utilizzato da soggetti diversi dal proprietario (ad es. nonno, baby-sitter), illustrare loro l'uso corretto.

Compatibile solo con: Surf Telaio

Portata cesto: 5 kg

Borsa fasciatoio: Carico massimo = 1kg (venduto separatamente)

Portabibite: carico massimo = 0,5 kg

Pedana Buggy Board: carico massimo = 20kg (venduto separatamente)

Cura e manutenzione

Telaio: verificare sempre che sul passeggino non siano presenti segni di usura. Lubrificare regolarmente tutte le parti mobili. Verificare che i dispositivi di bloccaggio funzionino correttamente. Lucidare le parti in metallo con un panno pulito ed asciutto.

Tessuti e seduta: pulire con una spugna imbevuta di acqua tiepida e sapone. Risciacquare bene con acqua pulita per evitare di macchiare il tessuto. Lasciar asciugare, lontano da fonti di calore e dalla luce diretta del sole. Con l'uso quotidiano, il tessuto può scolorire nel corso del tempo. Non lavare in lavatrice, non utilizzare asciugabiancheria, non stirare e non candeggiare.

Garanzia

Tutti i prodotti Silver Cross sono garantiti per un periodo di 12 mesi contro difetti di fabbricazione, purché il prodotto venga utilizzato correttamente, in conformità al manuale delle istruzioni.

Leggere attentamente le istruzioni prima di utilizzare il nuovo prodotto Silver Cross e conservarle per future consultazioni.

Notas de seguridad

Este artículo es un producto de gran calidad de Silver Cross. Cumple las normativas EN1888:2012 y EN1466:2004, y si lo utiliza adecuadamente y realiza un buen mantenimiento, le proporcionará un servicio excelente. No obstante, si tiene algún problema con su producto, póngase en contacto con el minorista Silver Cross, quien se encargará apropiadamente del asunto.

Este producto se llama: Surf

ADVERTENCIA:

Nunca deje al niño desatendido.

Antes de utilizar la silla, compruebe que todos los dispositivos de bloqueo están correctamente accionados.

Para evitar lesiones, asegúrese de que el niño no esté cerca cuando pliegue y despliegue este producto.

No deje que el niño juegue con este producto.

Utilizzare l'imbracatura non appena il bambino sarà in grado di stare seduto da solo.

modo capazo:

Este producto es adecuado para niños que no pueden mantenerse sentados solos, darse la vuelta ni incorporarse apoyándose en manos y rodillas.

Peso máximo del niño: 9 kg.

No deje que los niños jueguen cerca de este capazo sin supervisión.

Modo Cochecito:

Este producto no es apto para niños menores de 6 meses.

Peso máximo del niño: 15kg

Utilice siempre el arnés proporcionado.

Compruebe que los dispositivos de sujeción del capazo o asiento o silla de coche estén correctamente accionados antes de su uso.

Este producto no es adecuado para correr ni patinar.

No lleve más de un niño en el cochecito.

Dispositivo de estacionamiento debe estar accionado al colocar y levantar al niño de la silla.

Este producto sólo es adecuado para un niño que no puede sentarse sin ayuda.

Nunca utilice el capazo sobre un soporte.

No utilice la silla si está rota o le falta alguna pieza.

Sea consciente del peligro que supone colocar el capazo cerca de chimeneas abiertas y otras fuentes de calor fuerte, como estufas eléctricas, estufas de gas, etc.

Se debe inspeccionar los manillares y el fondo del capazo con regularidad por si hubiera indicios de desgaste y desperfectos.

Utilice únicamente el colchón suministrado.

Si se utiliza la silla de coche: Esta silla de coche no sustituye la cuna o cama del niño. Si el niño necesita dormir, entonces deberá colocarlo en una cuna o capazo adecuado.

Los pesos que se cuelguen del manillar y/o respaldo y/o laterales del vehículo afectarán a su estabilidad.

No sitúe a un segundo niño en la protección trasera como si fuera un patinete acoplado.

No utilice patinetes acoplados de otros fabricantes.

No deben utilizarse accesorios no autorizados por Silver Cross.

Solo deben utilizarse piezas de recambio suministradas/recomendadas por Silver Cross.

A la hora de realizar ajustes, hay que mantener al niño lejos de piezas móviles.

No deje que el niño baje o suba de la silla él solo, ya que podría resultar herido o provocar daños a la silla.

Nunca deje al niño en la sillita con la capota puesta, salvo para su uso normal en exteriores.

Usted es responsable de la seguridad del bebé.

Solo debe usarse en suelos firmes, horizontales, nivelados y secos.

El niño debe llevar siempre abrochado un arnés de seguridad que cumpla la normativa BS6684. Se proporcionan anillas para sujetar otro arnés. Estas están situadas en el arnés existente, cerca del lugar donde está sujeto al armazón del asiento.

Sujete siempre el asiento cuando haga ajustes. Compruebe que la silla tiene accionado el dispositivo de estacionamiento. Si tiene dificultades para plegar o desplegar la silla, no ejerza fuerza o la dañará. Lea detenidamente las instrucciones «Para plegar y desplegar». Puede resultar poco seguro colocar accesorios o piezas de recambio diferentes a los suministrados o recomendados por Silver Cross. Si este producto va a ser utilizado por otras personas aparte del propietario (p. ej. un abuelo o una niñera), enséñeles cómo hacerlo correctamente.

Sólo es compatible con: Surf Chasis

Capacidad de la cesta: 5 kg

Cambio de la bolsa: La carga máxima = 1kg (se vende por separado)

Portavasos: Peso máximo = 0,5 kg

Patinete acoplado – Peso máximo = 20 kg (se vende por separado)

Cuidado y mantenimiento

Chasis - Compruebe siempre la silla por si hubiera indicios de desgaste. Lubrique periódicamente todas las partes móviles. Compruebe que haya total libertad de movimiento en todos los dispositivos de bloqueo. Pule el metal con un paño limpio y seco.

Componentes de tela y asiento - Para limpiar, pase una esponja por la zona con agua templada con jabón. Aclare bien con agua limpia para evitar manchas. Deje secar al aire, lejos del calor directo y de la luz solar fuerte. Es posible que pierdan algo de color con el uso diario. No los lave nunca a máquina, no los seque en la secadora, no los planche ni utilice lejía.

Garantía

Todos los productos de Silver Cross incluyen una garantía de 12 meses contra defectos de fabricación, siempre que el producto se utilice correctamente de acuerdo con el manual de instrucciones. Lea detenidamente estas instrucciones antes de utilizar su nuevo producto Silver Cross y consérvelas para consultarlas en el futuro.

Примечания по безопасности

Вы приобрели высококачественное изделие компании Silver Cross. Оно соответствует требованиям стандартов BS EN1888:2012 и BS EN1466:2004 и при надлежащем использовании и уходе будет безотказно служить вам. Если, тем не менее, с изделием возникнут какие-либо проблемы, обращайтесь за помощью в магазин Silver Cross по месту приобретения коляски. Этот продукт называется: Surf

ВНИМАНИЕ!

Никогда не оставляйте ребенка без присмотра.

Прежде чем использовать коляску, убедитесь, что задействованы все фиксаторы.

Раскладывайте и складывайте изделие на удалении от ребенка во избежание травм.

Не давайте ребенку использовать изделие в качестве игрушки.

Используйте ремень безопасности, как только ваш ребенок научиться сидеть самостоятельно.

Люлька режиме:

- Данное изделие пригодно для ребенка, который не может сидеть самостоятельно, переворачиваться и стоять на коленях, опираясь на руки.
- Максимальный вес ребенка – 9 кг
- Не разрешайте другим детям играть рядом с переносной колыбелькой без присмотра.

Коляска режиме:

- Данное изделие не предназначено для детей младше 6 месяцев.
- Максимальный вес ребенка – 15 кг
- Всегда используйте входящие в комплект коляски ремни.

Перед использованием коляски

убедитесь, что крепления рамы коляски, сиденья или автокресла правильно зафиксированы.

Данное изделие не предназначено для бега или катания на роликах.

Не носите с собой более одного ребенка в этой коляске.

При размещении ребенка в коляске или его извлечении необходимо привести в действие стояночный тормоз.

Этот продукт подходит только для ребенка, который не может сидеть без посторонней помощи.

Запрещается устанавливать переносную колыбельку на держателе.

В случае поломки, деформации или отсутствия отдельных деталей использовать изделие нельзя.

Необходимо регулярно осматривать ручки и днище на предмет повреждений и износа.

Используйте только матрас, идущий в комплекте.

В случае использования автокресла: данное автомобильное кресло не заменяет люльки или кровати. Если ребенку необходимо спать, его следует поместить в детскую коляску или люльку.

Вещи, висящие на ручках и/или на обратной стороне спинки и/или боках коляски снижают ее устойчивость.

Не позволяйте другим детям вставать на задний тормоз или использовать его в качестве приступки.

Не используйте приступки сторонних производителей. Используйте только аксессуары, одобренные компанией Silver Cross. Следует использовать запасные

части, произведенные / рекомендованные компанией Silver Cross.

Осторожно! Регулируя коляску, следите за тем, чтобы ребенок не приближался к ее подвижным деталям.

Не позволяйте ребенку самостоятельно садиться в коляску и вылезать из нее, поскольку он может получить травму или сломать коляску.

Никогда не оставляйте ребенка в коляске с полностью установленным дождевиком кроме случаев обычного использования коляски на улице.

Вы несете ответственность за безопасность вашего ребенка.

Помните о том, что наличие открытого огня или другого источника высоких температур (например, электрических или газовых нагревателей) в непосредственной близости от переносной колыбельки представляет опасность.

Использовать только на твердой горизонтальной ровной и сухой поверхности. Ребенок должен быть обязательно пристегнут ремнями безопасности, соответствующими стандарту BS6684. Для крепления дополнительных ремней в конструкции люльки предусмотрены D-образные кольца. Они расположены на стандартных ремнях безопасности рядом с точками их крепления к раме сиденья.

Регулируя положение деталей коляски, всегда держите ее за сиденье. При этом должен быть задействован тормоз коляски. Складывая и раскладывая коляску, не прикладывайте излишних усилий: вы можете ее повредить. Внимательно прочтите инструкции по складыванию и раскладыванию коляски. Использование аксессуаров и запасных деталей, не поставляемых и не

рекомендованных компанией Silver Cross, может быть опасным. Если люльку использует другой человек (например, бабушка, дедушка или няня), обязательно объясните этому человеку, как правильно ее использовать.

Только совместим с: Surf шасси

Вместимость корзины: 5 кг

Сумка для покупок: Максимальная нагрузка = 1кг (продается отдельно)

Подстаканник: максимальная нагрузка = 0,5 кг

Приступка коляски – максимальная нагрузка = 20 кг (продается отдельно)

Уход и обслуживание

Рама – всегда проверяйте коляску на предмет износа. Регулярно смазывайте все подвижные детали. Проверяйте, свободно ли работают все фиксаторы. Металлические части протирайте сухой, чистой тканью.

Детали из ткани и сиденье – для очистки деталей протрите губкой, смоченной теплой водой с мылом. Тщательно ополосните чистой водой, чтобы удалить остатки мыла.

Просушите детали коляски в стороне от источников тепла и прямых солнечных лучей. Со временем ткань может немного выцвести в процессе повседневного использования.

Не стирайте и не сушите детали коляски в стиральной машине, не гладьте и не отбеливайте их.

Гарантия

На всю продукцию Silver Cross действует гарантия сроком 12 месяцев, покрывающая случаи производственного брака, при условии использования изделия в соответствии с инструкциями.

Перед использованием нового изделия Silver Cross внимательно прочтите данную инструкцию и сохраните ее для использования в будущем.

安全注意事项

本品是Silver Cross生产的一款优质产品。本品符合BS EN1888:2012以及BS EN1466:2004标准，如果合理使用和维护得当，本品将经久耐用。如果您的产品出现任何问题，请联系Silver Cross零售商，零售商将采取适当措施。该产品被称为：Surf

警告：

婴儿乘坐时必须有人看护。使用前确保所有锁定装置均处于锁定状态。

为了避免伤到婴儿，在折起或打开本产品时请不要让孩子靠近。

不可让婴儿摆弄本产品。请在幼儿可以自行端坐时使用束带。

婴儿床模式：

- 该产品适用于不能自行直坐以及不能用手和膝盖撑起身体的幼儿。
- 幼儿最大体重：9kg
- 不要让其他无人看护的孩子在本婴儿睡篮旁边玩耍。

婴儿推车模式：

- 本产品不适合6个月以下的婴儿。
- 幼儿最大体重：15kg
- 始终使用约束防护装置。

使用前检查婴儿车的车身、座椅或汽车座位连接装置是否牢固。

本产品不适合奔跑或滑行。不要随身携带一个以上的孩子在这种折叠式婴儿车。

在将婴儿抱进、抱出婴儿车时要启用刹车装置。

本产品仅适合一个孩子谁不能独立坐起的。

不要在支架上使用婴儿睡篮。如有部件出现破损、撕裂或丢失，请勿使用。

小心明火及其他强热源危险，如婴儿睡篮附近的电热炉、煤气炉等。

应定期检查手柄和底部是否有损坏及磨损迹象。

只可使用随附的座垫。

如果使用汽车座椅：本汽车座椅不可代替婴儿床或床具使用。如果孩子需要睡觉，请使用适当的婴儿推车或婴儿床。婴儿车手柄和（或）座椅靠背和（或）婴儿车两侧如果有任何负重均会影响婴儿车的稳定性。

不要让其他孩子站在后闸上并将其用作婴儿车后踏板。

不要附加第三方婴儿车后踏板。

不得使用未经Silver Cross认证的配件。

只可使用Silver Cross提供或推荐的备用件。

小心：在调节时不要让孩子靠近移动部件。

请勿让幼儿自己爬进或爬出婴儿推车，因为这将伤到幼儿或损坏婴儿推车。

除正常户外使用外，切勿在完全安装雨蓬状态下将孩子留在婴儿推车中。

保护婴儿的安全是您的责任。

请在调节时务必按住座椅。
只可在坚固、水平且干燥的地面上使用。

婴儿应始终系好符合BS6684标准的安全带。同时提供“D”形环，用来安装加固安全带。这些“D”形环位于现有安全带与座椅框架的连接处附近。

进行调节时始终握住座椅。要确保刹车装置已启用。如果您在收起或展开折叠式婴儿车时遇到困难，请勿强行操作，否则会造成损毁。仔细阅读“收起或展开”说明。除 Silver-Cross提供或推荐的产品外，安装其他配件或备件可能会有安全隐患。如果其他人（如爷爷奶奶、保姆）要使用婴儿车，请向其演示正确操作方法。

只有兼容：Surf 机壳

购物篮承重：5公斤

更换包：最大负载= 1kg（单独出售）

杯架：最大负载= 0.5公斤

婴儿车后踏板——最大负载 = 20公斤（单独出售）

维护与保养

底盘——要经常检查折叠式婴儿车是否有磨损迹象。定期润滑所有运转零件。检查所有锁定装置的运动灵活性。用干净、干爽的抹布擦拭金属部件。

织物和座椅——清洁时用海绵蘸温热肥皂水擦拭。之后用清水冲洗以免留下污迹。自然晾

干，请勿将产品置于直接热源和日照强烈的地方。随着长期使用，产品可能出现某种程度上的褪色。请勿机洗、烘干、熨烫或漂白。

保修

在依据说明书正确使用产品的情况下，所有Silver Cross产品对工艺质量问题保修期为12个月。

使用新购Silver Cross产品前请仔细阅读这些说明，并注意保存以备参考。

Silver Cross®

THE BEST START IN LIFE

Silver Cross (UK) Ltd, Micklethorn, Broughton, Skipton, North Yorkshire, BD23 3JA

silvercrossbaby.com

SXSURFUK1013W